

Warnings

Mosquito screens are designed to protect against insects, rodents and small reptiles and not to ensure safety or to prevent objects or people from entering, nor to prevent a child from falling from a window.

The product is equipped with a lower rail, pay special attention during the passage to avoid tripping.

In situations of low visibility and for people with visual difficulties, the net could be unrecognisable; it is advisable to highlight it clearly with coloured signs.

*** The anchor plates should not be tightened too much.**

Operation in icy conditions can damage the screen and in windy conditions it is advisable to pack away the screen.

Do not remove product and CE mark labels from manufacture. The company reserves the right to modify all or part of the product without prior notice, and declines any responsibility for any inaccurate data. The company is not responsible for autonomous actions without prior consent nor tampering and/or modifications that may be carried out.

Use

Activation

Pull the handle bar, sliding it along the rails until the screen is fully packed inside the drawer

Deactivation

Take the handle bar and slide it on the rails until the net is fully packed inside the drawer

Maintenance

Only carry out the maintenance operations indicated in the instructions. Under the action of external environmental conditions the network does not favour the growth of micro-organisms. For the external cleaning of the product use water and soap, after brushing both the net and the profiles, rinsing carefully.

Avoid the use of oils, greases, abrasive detergents and solvents, lubrication can be carried out with silicone spray.

It is advisable to use the product at least once every three months to avoid clogging of the mechanisms. Any other type of manoeuvring must be carried out by authorised assistance centres or by the company.

The net and/or some components are considered products subject to wear, so it is preferable to adhere to a technical assistance service scheduled with specialized centres.

The company thanks you for purchasing this mosquito screen; please read the contents of this document carefully and keep it.

This manual is an integral part of the screen and is intended to provide you with all the information you need for installation, use and maintenance.

The instructions, designs and documentation contained in this manual are of a technical nature and are the property of the company and may not be reproduced in any form, in whole or in part.

saxun
by Giménez Ganga

Giménez Ganga, S.L.U.
Polígono Industrial El Castillo
C/ Roma, 4
03630• Sax (Alicante) • España

saxun.com

MK0356 - EN - 01 - 0522

saxun
by Giménez Ganga

Assembly manual Pleated Mosquito Screen 27 Vertical



1. Components



Description	
1	Anchor plates
2	Mobile profile
3	Guides
4	Fixed profile
5	Clamping thread (with nut)

* Drive bar (optional).

Step 1

Place the lateral guides, drill and fix with screws.




Step 3

Using a hexagonal wrench, push the anchor plate and mosquito screen upwards until they rest on the upper frame.

Then tighten the anchor plate screw.

* Repeat the operation on the other side..

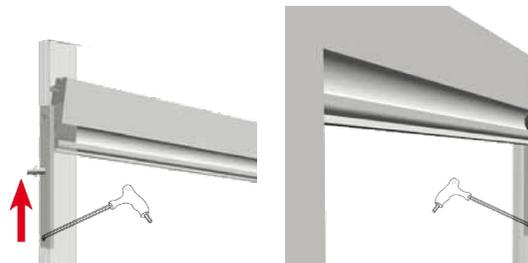

Step 2

Place the mosquito screen between the guides. Support it on the anchor plates.



Step 4

Only in case of custom-made mosquito screens: open the mosquito screen by resting the mobile profile on the window sill and using the hexagonal key move the tensioner along the guides to adjust the horizontal position of the mobile profile and tighten the threads.

