


A. I. KIT FOR CROSSED ARMS • ENG • 01 • 0221

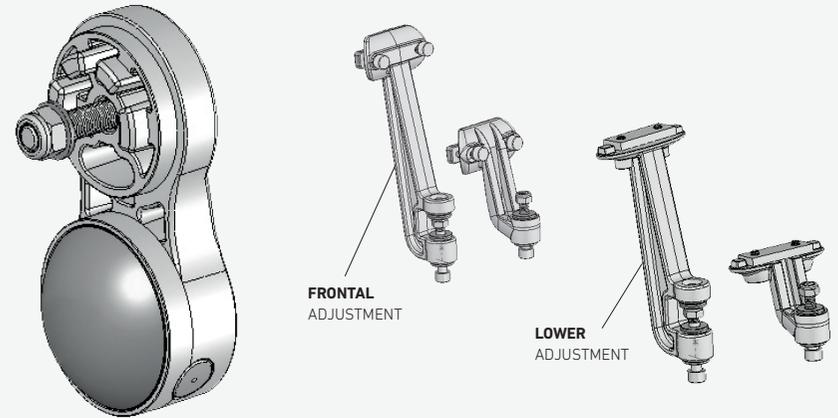

## **KIT FOR CROSSED ARMS**

### ASSEMBLY INSTRUCTIONS


ENG

# ASSEMBLY INSTRUCTIONS KIT FOR CROSSED ARMS

## STEP 1

Remove the rounded arm support from the left Premium M1 | Premium A 1 support and place it in the Premium long support at the desired slope.


Place the long support in the left Premium M1 | Premium A1 support.

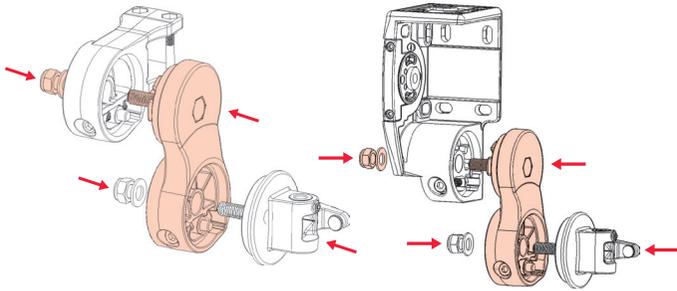

## STEP 2


Tighten and block the long support with the left Premium M1 | Premium A 1 support.

Pre-adjust the rounded arm support with the long support.

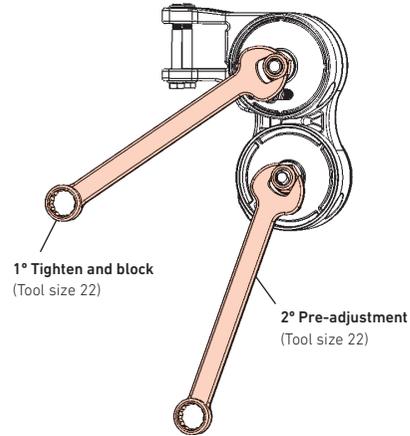


## STEP 3

Fit the arm in the long support, centering the axle in its hole and tightening the hexagon socket set screw (refer to the Premium Arm Assembly instructions).

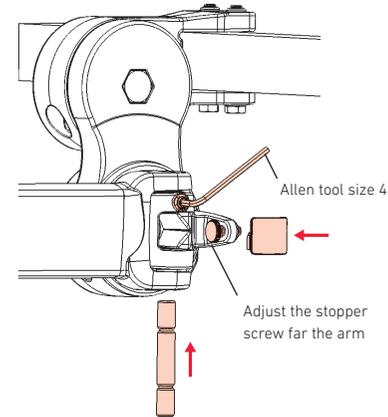

## STEP 4


Tighten and block.

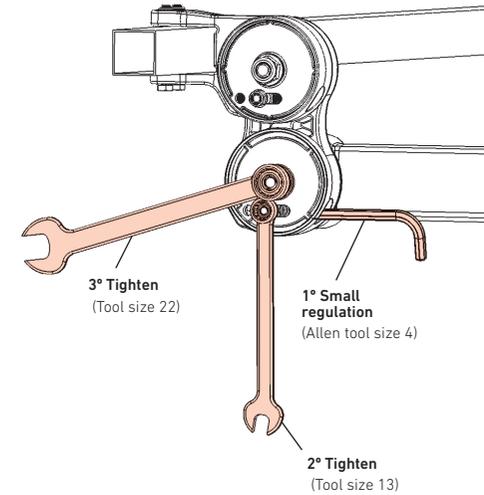

## STEP 5

Placing the caps.


Fit the cap with the nut adjusting the pivot with the support hale and press.

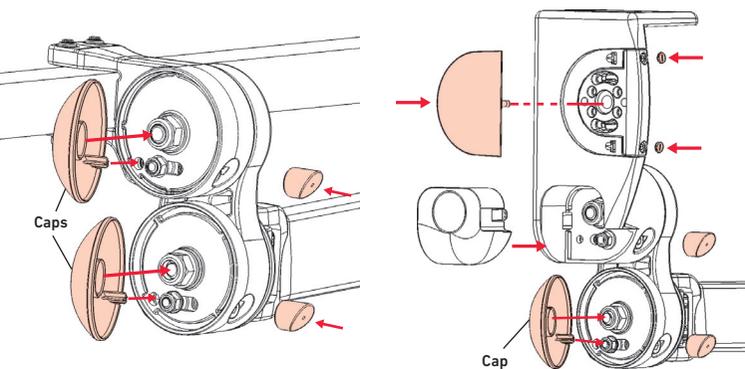

## STEP 6


Place the flange in the frontal profile and screw it to the adjustment without tightening too much.

**Note:** the long adjustment is always located at the left side.

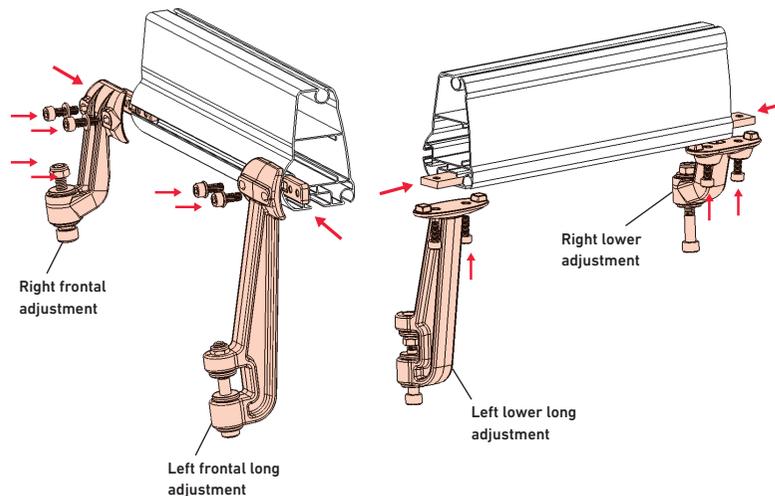


## STEP 7.1

Insert nut.

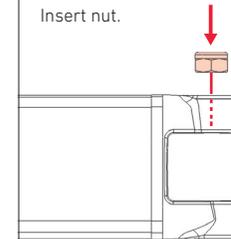

## STEP 7.2

Placing the round caps in the adjustment.

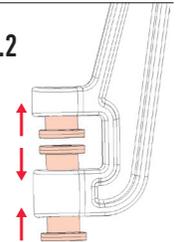

## STEP 7.3

Place the adjustment in the frontal profile and screw.

